

YAMAHA VIKING / RHINO / WOLVERINE INDICATOR SWITCH INSTALLATION

QUADTECH
WWW.QUADTECH.CO.UK

Yamaha Viking Indicator Switch Installation

Drill through blanked-off holes in switch (4mm),
place in a vice to drill if necessary


Remove nut from indicator switch

Drill a hole the diameter of the the indicator switch
thread in the location where it is to be mounted



Position switch in the correct position
Drill through the holes surrounded with brass crimp

Re-drill holes to 4mm

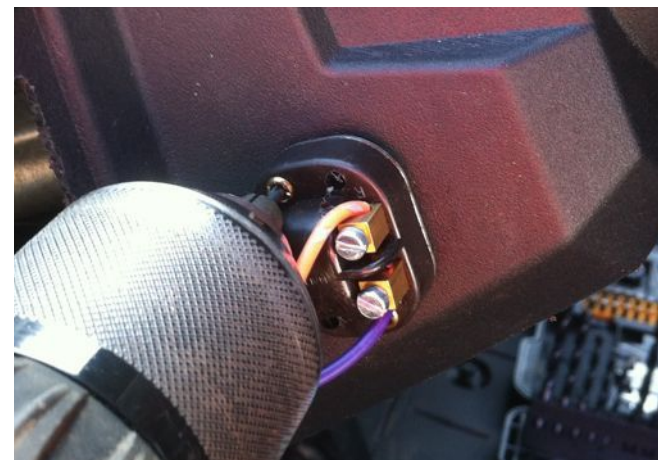

Connect wiring:
Purple - 'L'
Orange - 'R'
Brown - 'K'
Black/White - '49A'



Fit switch through hole and use M4 bolts to
secure into place (I left the bolts in the cup
holder on top of dashboard)

Orange wire (R) should be at the bottom
Purple wire (L) should be at the top




YAMAHA VIKING / RHINO / WOLVERINE

REAR LIGHT REPLACEMENT

QUADTECH
WWW.QUADTECH.CO.UK

Installation of replacement rear Viking lights


- 1) Unplug original tail lights
- 2) Remove plastic cowls containing tail lights
- 3) Unbolt lights from cowls
- 4) Notch plastic tail light mount with a file as per diagram below as the new mounting bolts are slightly closer together

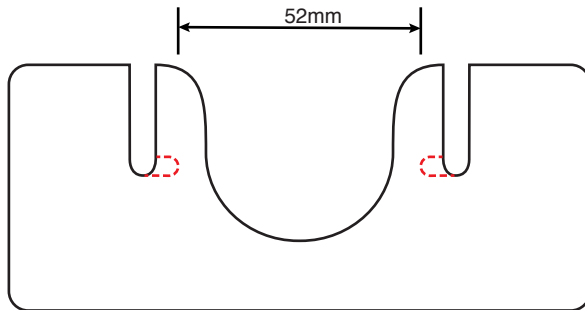


- 5) Fit new tail lights. Place 5 washers on each bolt then insert through plastic followed by 1 washer then nut




- 6) Refit cowls
- 7) Connect wiring as follows

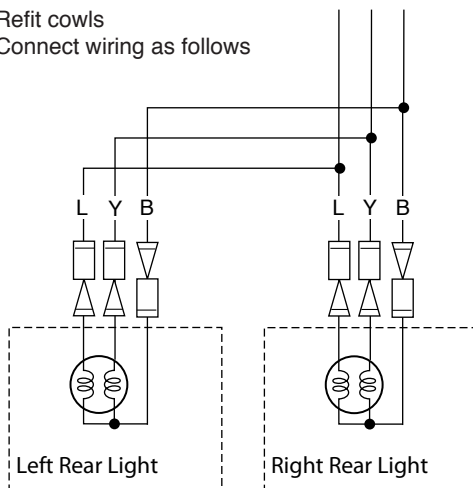

Original Yamaha Brake/Tail Light Wiring

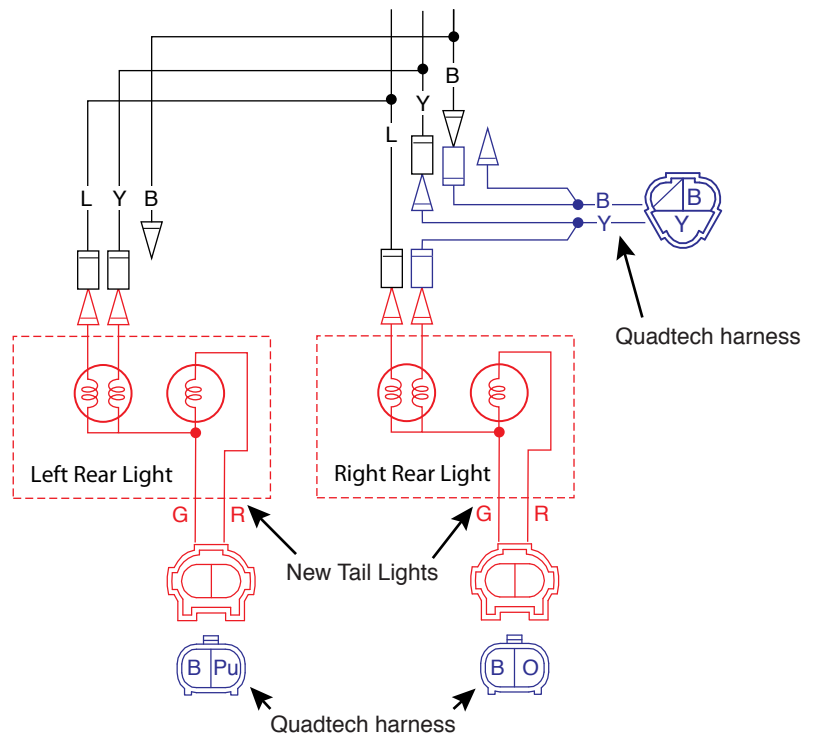


New Turn/Brake/Tail Light Wiring

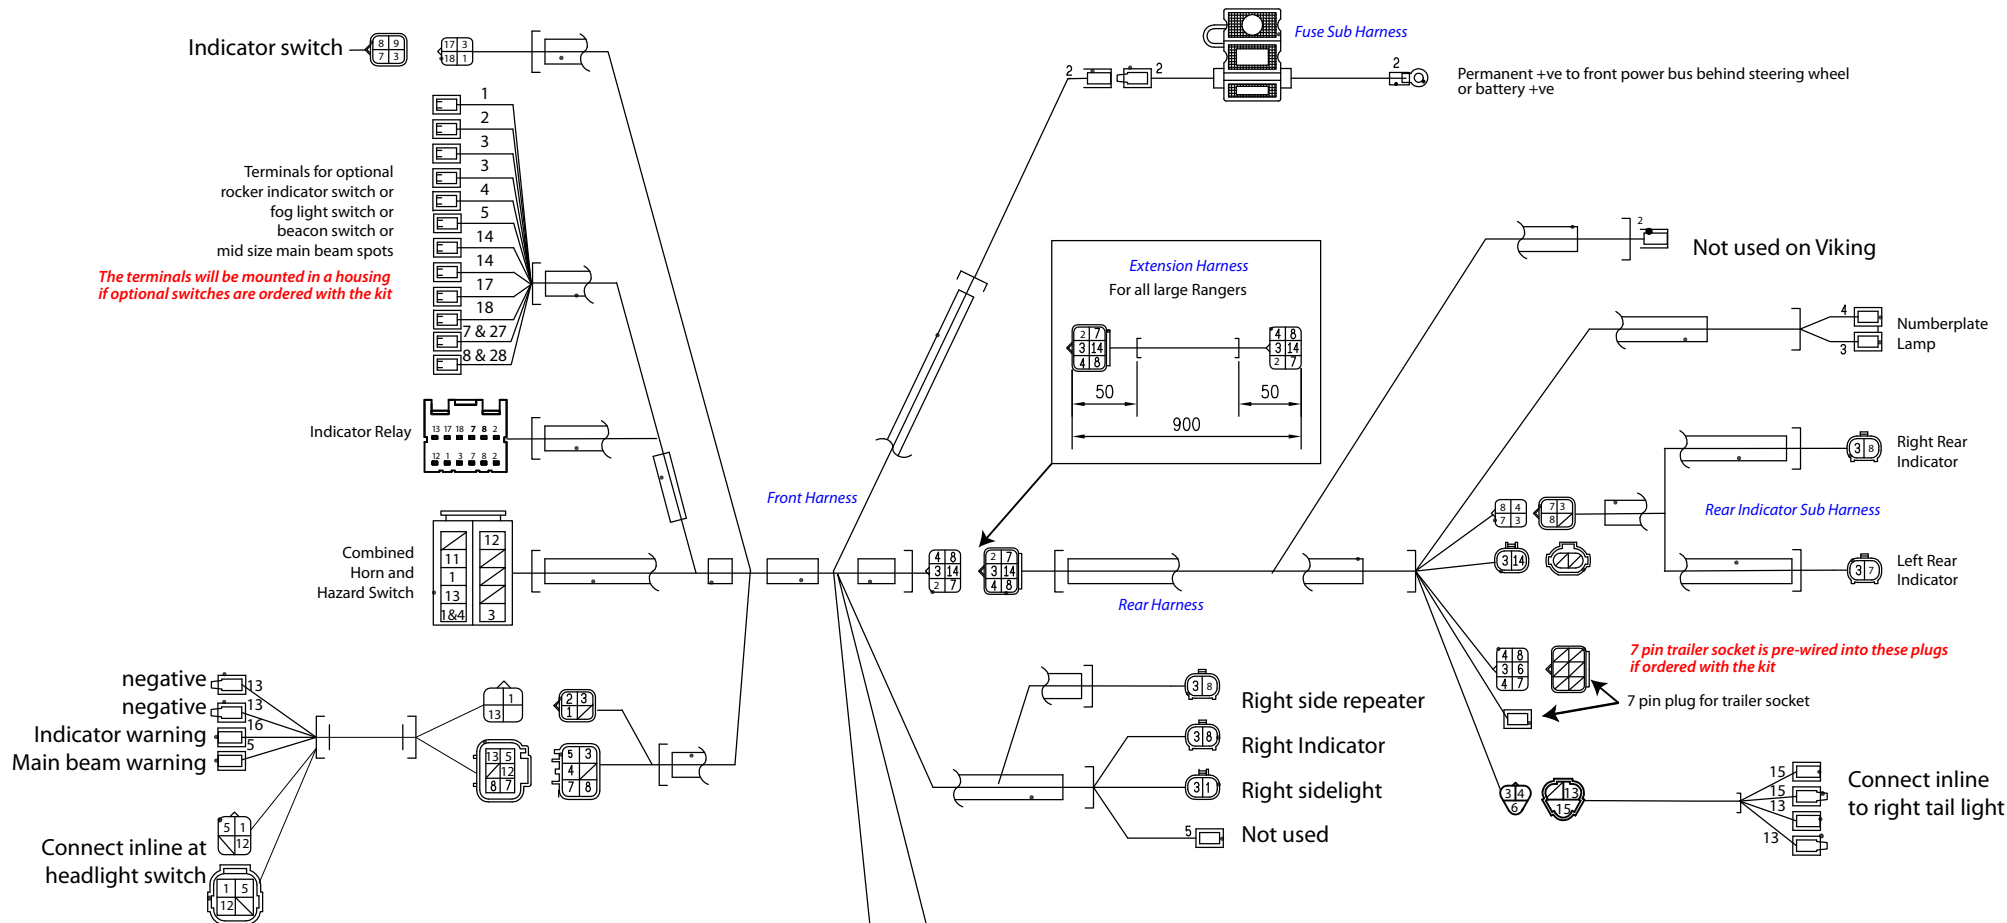

- 1 R/W - switched +ve
- 2 R - permanent +ve
- 3 Br - negative
- 4 R/Y - sidelights
- 5 Y - auxilliary front lights (optional)
- 6 G - Brake lights
- 7 Violet - Left Indicators
- 8 O - Right Indicators
- 9 B/W - From indicator relay
- 10 W/B - To indicator relay
- 11 P - Horn (optional)
- 12 L - sidelights
- 13 B - negative
- 14 R/B - Fog light (optional)
- 15 Y - Brake lights
- 16 W - Indicator warning

Connections for pod front indicators

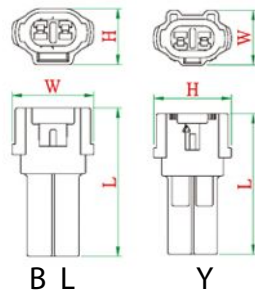

<div></div>		<div></div>		<div>QUADTECH</div> <div>www.quadtech.co.uk</div>		<div>3D</div> <div>/</div>		<div>KEY No.</div> <div>TA</div>	
<div>SPECIFICATION</div>				<div>SCALE</div> <div>Free</div>		<div>MATERIAL</div> <div>see Table</div>		<div><div></div><div></div></div> <div>WT.RTME</div>	
<div>APPLICABLE DWG</div>				<div>DRAWER</div> <div>/</div>		<div>DESIGNED</div> <div></div>		<div>D</div> <div>CHECK</div> <div>CHECK</div> <div>APPR</div>	
<div><div></div><div></div><div></div><div></div><div></div></div>						<div>P</div>			
<div>12 - 先行圖</div>									
<div>REVISION RECORD</div>				<div>DATE</div>		<div>DR</div>		<div>CK</div>	
<div>CUSTOMER PART NAME</div>				<div>CUSTOMER DWG NO.</div>					
<div>YAMAHA Viking / Rhino Lighting harness</div>				<div>QT-SXS-VIKING-005</div>					